

ATEX APPROVED





CL50 & CL75 operating instructions

WHO WE ARE

CENGAR AIR SAW MODELS CL50 & CL75

Professionals in many Industries have relied on Cengar products for reliability, low maintenance and operator safety for decades. Our Cengar Air Saws are used Worldwide in many industries, where our quality saws are relied upon and trusted for their cutting performance. Since 2016 our Pallet Spreader has become the pallet repairer's number one choice for helping to repair and recycle used pallets. We are proud that we can help sustainability and the environment. More recently Cengar has added impact sockets to its portfolio, we are able to manufacture high-quality impact sockets for use on pneumatic, hydraulic, petrol and battery Impact Wrenches.

We recommend normal safe working practices should be followed as per the Health and Safety at Work Act, or the appropriate National and State Laws. We recommend that eye and ear protection be worn when using Cengar Saws.

| SPECIFIC | CATIONS |
|--------------------------|---------------------------|
| Speed | 1200 strokes per minute |
| Stroke | 45mm |
| Air Consumption | 0.168m³/minute |
| Air Pressure | 5-6 Bar |
| Weight | 2.5Kgs |
| Length | 400mm |
| Height | 135mm |
| Width | 40.6mm |
| Vibration Level Averaged | 3.2m/s ² |
| Sound Pressure Level | 82.9dbA |
| Sound Power Level | 92.4dbA |
| CL50 Atex Certification | € II 2G Ex h IIC T2 Gb |
| CL75 Atex Certification | ⟨Ex⟩ II 2G Ex h IIC T3 Gb |

Each machine is marked with a serial number, which contains the year and month of construction, along with an identifier number.

Serial number example:



Month of construction

Machine identified as shown, nose piece not to be interchanged



UK DECLARATION OF CONFORMITY

EU DECLARATION OF CONFORMITY

We the undersigned, declare under our sole responsibility that the following apparatus:

| Machine Description | Cengar Air Saw |
|---------------------|----------------|
| Machine Type | CL50 & CL75 |

Is in conformity with the following relevant UK legislation:

| Supply of Machinery (Safety) Regulations 2008 (as amended | | | |
|---|--------------|--|--|
| UKEX Regulations | SI 2016:1107 | | |

Based on the following Harmonised Standards:

EN ISO 4414:2010 EN ISO 80079-36:2016 EN ISO 80079-37:2016 EN 60079-0:2018

And therefore complies with the essential requirements of those directives.

The following ignition hazards have been identified when the equipment is in use, hot surfaces, mechanical sparks, electrostatic charging. These are mitigated as the equipment was designed to meet the requirements of protection concept constructional safety "c".

| ADI | DITIONAL INFORMATION |
|---|---|
| UKEX coding | CL 50 (Ex) II 2G Ex h IIC T2 Gb CL 75 (Ex) II 2G Ex h IIC T3 Gb |
| Approved Body (UKEX holding technical file) | Element Materials Technology Warwick Ltd Unit 1, Pendle Place, Skelmersdale, West Lancashire WN8 9PN, United Kingdom. |
| Identification Number | 0891 |
| Certificate No. | EMA21UKEX0011X |
| Authorised Signature | S. Sha |
| Date | 10/05/2021 |
| Title of Signatory | Commercial Manager - Cengar Ltd. Springfield Works, Saddleworth Road, Greetland, Halifax HX4 8LZ |
| Special Conditions of Safe Use (on the certificate) | Suitably approved static dissipating or conductive air hose only to be attached to the equipment and terminated to the air supply. Operator to ensure that there is less than 1 Ohm resistance between the ground at the air source and any metallic object to be cut with the equipment. The equipment shall be supplied from a clean air source in an area known to not contain a potentially explosive atmosphere. A filter must be fitted to the supply compressor inlet to prevent dust airflow within the equipment. To comply with UKEX certification regulations it is necessary to use Cengar branded Blades with Cengar Saws. |

^{1.} Under normal working conditions can be used in a Zone 1 environment.

We the undersigned, declare under our sole responsibility that the following apparatus:

| Machine Description | Cengar Air Saw |
|---------------------|----------------|
| Machine Type | CL50 & CL75 |

Is in conformity with the following relevant EC legislation:

| Machinery Directive | 2006/42/EC |
|---------------------|------------|
| Atex Directive | 2014/34/EU |

Based on the following Harmonised Standards:

EN ISO 4414:2010 EN ISO 80079-36:2016 EN ISO 80079-37:2016 EN 60079-0:2018

And therefore complies with the essential requirements of those directives.

The following ignition hazards have been identified when the equipment is in use, hot surfaces, mechanical sparks, electrostatic charging. These are mitigated as the equipment was designed to meet the requirements of protection concept constructional safety "c".

| ADI | DITIONAL INFORMATION |
|---|---|
| ATEX Coding | CL 50 (Ex) II 2G Ex h IIC T2 Gb CL 75 (Ex) II 2G Ex h IIC T3 Gb |
| Notified Body (Atex holding technical file) | Element Materials Technology Rotterdam B.V. Voorerf 18, 4824 GN Breda, Netherlands |
| Identification Number | 2812 |
| Certificate No. | EMT18ATEX 0032X |
| Authorised Signature | S.Sha |
| Date | 06/02/2020 |
| Title of Signatory | Commercial Manager - Cengar Ltd. Springfield Works, Saddleworth Road, Greetland, Halifax HX4 8LZ |
| Special Conditions of Safe Use (on the certificate) | Suitably approved static dissipating or conductive air hose only to be attached to the equipment and terminated to the air supply. Operator to ensure that there is less than 1 Ohm resistance between the ground at the air source and any metallic object to be cut with the equipment. The equipment shall be supplied from a clean air source in an area known to not contain a potentially explosive atmosphere. A filter must be fitted to the supply compressor inlet to prevent dust airflow within the equipment. To comply with ATEX certification regulations it is necessary to use Cengar branded Blades with Cengar Saws. |

^{1.} Under normal working conditions can be used in a Zone 1 environment.


^{2.} Classification based on tests cutting a selection of steels & composite materials (MB, MC, Yellow, JSZ) Blades.



^{2.} Classification based on tests cutting a selection of steels & composite materials (MB, MC, Yellow, JSZ) Blades.

INSTRUCTIONS

DO'S & DON'TS

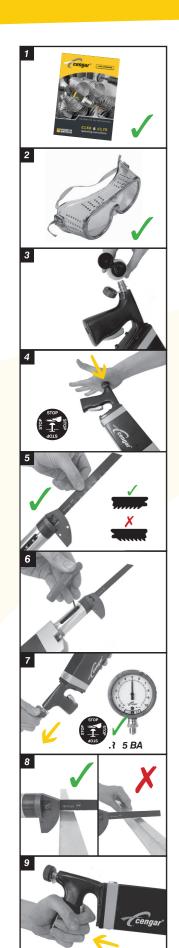


- 1. Always read the instructions.
- 2. Always wear safety glasses.
- 3. Unscrew oil cap and fill with Cengar Green Oil. Replace cap.
- 4. Isolate air supply before fitting blade by pushing stop button in.
- 5. Fit the blade with the teeth facing the machine. Avoid handling the blade teeth.
- 6. Secure blade by tightening both grip screws with supplied T key.
- 7. Connect to 5-6 bar air supply and pull out stop button.
- 8. Ensure nosepiece is pressed against work piece to be cut.
- 9. Press trigger and apply light downward pressure.

Please refer to page 10 for the correct blade selection.


- 1. ALWAYS use Cengar green oil for best results. Keeping the saw clean and well oiled will give excellent reliability, and a long life.
- 2. ALWAYS use Cengar Bi-Metal Shatterproof blades, for safety, and best cutting performance.
- 3. ALWAYS isolate the air supply when changing blades.
- 4. ALWAYS wear eye protection when using saws.
- 5. ALWAYS keep the nosepiece hard against the work piece to prevent excessive vibration.
- 6. ALWAYS isolate the machine when not in use.
- 7. ALWAYS keep others away from the saw blade to prevent injury or trapping.
- 8. ALWAYS have machines vibration tested annually to ensure exposure is kept to the minimum.
- 1. **NEVER** fit breakable "All-Hard" blades in Cengar saws, these can shatter causing injury to the operator and others.
- 2. NEVER operate saw without wearing safety glasses.
- 3. NEVER operate saw whilst you, or others are near the saw blade, which can cause serious injury or trapping.
- 4. NEVER use excessive force because this may increase vibration above safe levels.
- 5. NEVER hold the Cengar saw in a vice by the body. This will distort the bores, rendering the tool inoperative.
- 6. NEVER screw nameplates to the body, as the screws may penetrate an airway or bore.
- 7. NEVER operate the Cengar saw without lubrication.
- 8. NEVER be tempted to clean internal parts with anything other than a clean lint free cloth or Cengar Green oil.
- 9. NEVER modify Cengar saws or use non Cengar parts. This will invalidate ATEX approval and warranty.



CL50FT & CL75FT EXPLODED VIEW

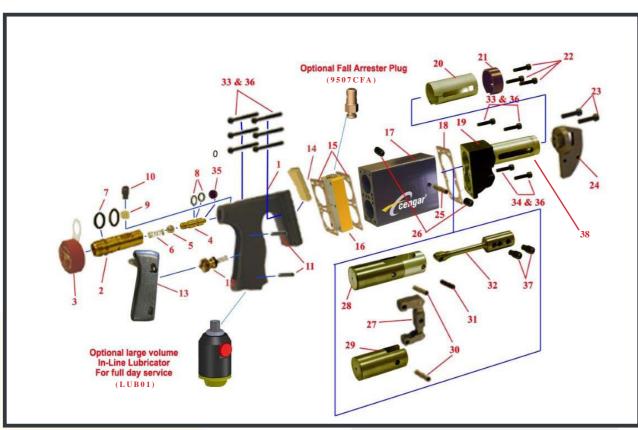

| ITEM | PART NO. | DESCRIPTION | NUMBER PER TOOL | ITEM | PART NO. | DESCRIPTION | NUMBER PER TOOL |
|---------|----------|--------------------|--------------------|------|-------------|-----------------------|--------------------|
| 1 | 9550 | Handle | 1 | 20 | 1144 | Silencer Guard | 1 |
| 2 | 9554 | Isolator Body | 1 | 21 | 1143A | Front End Cap | 1 |
| 3 | 9553 | Oil Cap & Retainer | 1 | 22 | 54160 | Front Cap Screws | 3 |
| 4 | 9555 | Isolator Nozzle | 1 | 23 | 54160 | Screws-Nosepiece | 2 |
| 5 | 9559 | Oil Control Ball | 1 | 24 | 5045-5075 | Nosepiece (1/2"-3/4") | 1 |
| 6 | 9334A | Spring | 1 | 25 | 1147 | Centre Shaft | 1 |
| 7 | 9561 | 'O' Ring Large | 2 | 26 | 55516 | Screws for Above | 2 |
| 8 | 9560 | 'O' Ring Small | 2 | 27 | 1150 | Link to Pistons | 1 |
| 9 | 9557 | Detente Spring | 1 | 28 | 1148 | Top Piston | 1 |
| 10 | 9556A | Lock Screw | 1 | 29 | 1152 | Bottom Piston | 1 |
| 2 to 10 | 9552 | Isolator Assembly | | 30 | 1147 | Pin to Link | 2 |
| 11 | 51834 | Roll Pin-Trigger | 2 | 31 | 1147 | Pin to Pedestal | 1 |
| 12 | 50034 | Valve in Handle | 1 | 32 | 1153-5 | Pedestal | 1 |
| 13 | 9502 | Trigger | 1 | 33 | 5540 | Screw-Handle/Front | 8 |
| 14 | 9506 | Filter/Gauze | 1 | 34 | 5520 | Screw-Front Lower | 2 |
| 15 | 9538 | Gasket | 2 | 35 | 9564 | 'O' Ring | 1 |
| 16 | 1139 | Valve Unit | 1 | 36 | W55 | Serrated Washer | 10 |
| 17 | 1141L | Body | 1 | 37 | 5068 | Screw-Blade Grip | 2 |
| 18 | 1142 | Gasket-Front End | 1 | 38 | - | Serial Number | - |
| 19 | 1143 | Front End Complete | 1 | | | | |

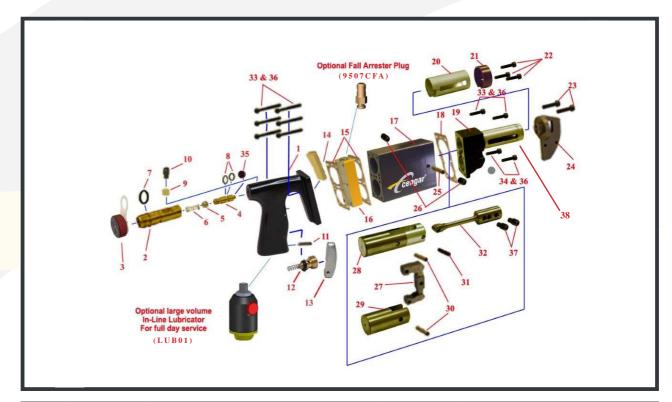

| ITEM | PART NO. | DESCRIPTION | NUMBER PER TOOL | ITEM | PART NO. | DESCRIPTION | NUMBER PER TOOL |
|---------|------------------|--------------------|--------------------|------|-------------|-----------------------|--------------------|
| 1 | 9550FT | Handle | 1 | 20 | 1144 | Silencer Guard | 1 |
| 2 | 9554 | Isolator Body | 1 | 21 | 1143A | Front End Cap | 1 |
| 3 | 9553 | Oil Cap & Retainer | 1 | 22 | 54160 | Front Cap Screws | 3 |
| 4 | 9555 | Isolator Nozzle | 1 | 23 | 54160 | Screws-Nosepiece | 2 |
| 5 | 9559 | Oil Control Ball | 1 | 24 | 5045-5075 | Nosepiece (1/2"-3/4") | 1 |
| 6 | 9334A | Spring | 1 | 25 | 1147 | Centre Shaft | 1 |
| 7 | 9561 | 'O' Ring Large | 2 | 26 | 55516 | Screws for Above | 2 |
| 8 | 9560 | 'O' Ring Small | 2 | 27 | 1150 | Link to Pistons | 1 |
| 9 | 9557 | Détente Spring | 1 | 28 | 1148 | Top Piston | 1 |
| 10 | 9556A Lock Screw | | 1 | 29 | 1152 | Bottom Piston | 1 |
| 2 to 10 | 9552 | Isolator Assembly | | 30 | 1147 | Pin to Link | 2 |
| 11 | 51834 | Roll Pin-Trigger | 1 | 31 | 1147 | Pin to Pedestal | 1 |
| 12 | 50034 | Valve in Handle | 1 | 32 | 1153-5 | Pedestal | 1 |
| 13 | 9502FT | Trigger | 1 | 33 | 5540 | Screw-Handle/Front | 8 |
| 14 | 9506 | Filter/Gauze | 1 | 34 | 5520 | Screw-Front Lower | 2 |
| 15 | 9538 | Gasket | 2 | 35 | 9564 | 'O' Ring | 1 |
| 16 | 1139 | Valve Unit | 1 | 36 | W55 | Serrated Washer | 10 |
| 17 | 1141L | Body | 1 | 37 | 5068 | Screw-Blade Grip | 2 |
| 18 | 1142 | Gasket-Front End | 1 | 38 | - | Serial Number | - |
| 19 | 1143 | Front End Complete | | | | | |



CENGAR BLADE SELECTION FOR CUTTING SOLID MATERIAL

ADDITIONAL CENGAR SAWS AVAILABLE

| | AVAI | LABLE | BLA | DE PI | TCHES | |
|-------------------|-----------|--------|--------|--------|------------------------|--------|
| Thickness (mm) | 32 TPI | 24 TPI | 18 TPI | 14 TPI | 10-14 TPI Varipitch | 10 TPI |
| 2 | 3 | 2 | 1 | 1 | 1 | 1 |
| 5 | 6 | 5 | 4 | 3 | 2 | 2 |
| 10 | 13 | 9 | 7 | 6 | 5 | 4 |
| 15 | 19 | 14 | 11 | 8 | 7 | 6 |
| 20 | 25 | 19 | 14 | 11 | 9 | 8 |
| 25 | 31 | 24 | 18 | 14 | 12 | 10 |
| 30 | 38 | 28 | 21 | 17 | 14 | 12 |
| 35 | 44 | 33 | 25 | 19 | 17 | 14 |
| 40 | 50 | 38 | 28 | 22 | 19 | 16 |
| 45 | <i>57</i> | 43 | 32 | 25 | 21 | 18 |
| 50 | 63 | 47 | 35 | 28 | 24 | 20 |
| 55 | 69 | 52 | 39 | 30 | 2 6 | 22 |

The numbers in the coloured boxes indicates the actual number of teeth which will be in contact with the work

| BLADE SELECTION | | | |
|--------------------|---------------|--|--|
| Pipe Diameter (mm) | CL75 on clamp | | |
| 50 | 200mm blade | | |
| 100 | 250mm blade | | |
| 150 | 300mm blade | | |

| GENERAL RULE: |
|---|
| No less that 3 teeth in contact |
| Ideally between 6 & 12 teeth in contact |
| No more than 24 teeth in contact |

| CL50 GENERAL PURPOSE CUTTING USING 12MM (1/2") WIDE CENGAR SHATTERPROOF BLADE | | | |
|--|-----------|----------------|--|
| Туре | Length mm | TPI | |
| Hand | 300 | 14, 18, 24, 32 | |
| МС | 220 | 10, 14, 18, 24 | |

| CL75 HEAVY STEEL SECTIONS UPTO 150MM DIA USING 19MM (3/4") WIDE SHATTERPROOF BLADES | | | |
|--|---------------|---------------|--|
| Туре | Length mm | TPI | |
| MB Blue for various steels | 150, 200, 250 | 10/14, 18, 24 | |
| MB Blue for various steels | 300 | 10/14, 14, 18 | |
| MBSS Silver for stainless steels | 250, 300 | 18 | |

The CL75 can be used with a clamp for pipe cutting. See cengar.com/portfolio/standard-clamp-kit

Visit our website www.cengar.com to view our range of blades, clamps and accessories.

PL905



Steel Sections Bolts, Gratings etc. up to 6mm thick and 25mm Composites.

JP901



Thin metal up to 3mm and GRP to 6mm thick.

CS75



High Quality Steel Pipe up to 150mm dia and similar size sections.

JSZ



Steel Pipe up to 300mm dia and similar size sections.





SERVICE

We offer a full factory repair and refurbishment service for Cengar Saws, normally within 5 working days. Quotations at no charge can be given before work is carried out.

DISTRIBUTOR ADDRESS

Cengar Ltd. Springfield Works, Saddleworth Road, Greetland, Halifax, England HX4 8LZ

Tel: 01422 377904 Fax: 01422 377161 enquiries@cengar.com

www.cengar.com





